


ISTRUZIONI PER IL MONTAGGIO KIT PROTEZIONE BOBINE

INSTRUCTIONS FOR ASSEMBLING THE COIL PROTECTION KIT




Il kit é utilizzabile su bobine 22 ø8 Metal Work Pneumatic marchio CE , che presentano la parte inferiore come indicato in figura
Il Kit é utilizzabile su valvole serie 70 G 1/8 e G 1/4, ISO 5599/1 taglia 1 e 2 con comandi elettrici in tecnopolimeri.
NB: lo scarico del pilota (A) deve essere convogliato o protetto.


*This kit can be used with Metal Work Pneumatic series 22 diameter 8 coils bearing the CE mark, the lower part of which is shown in the diagram.
The kit can be used with series 70 G 1/8 and G 1/4 ISO 5599/1 valves, sizes 1 and 2 with plastic control.
N.B. Pilot discharge (A) must be conveyed or protected.*

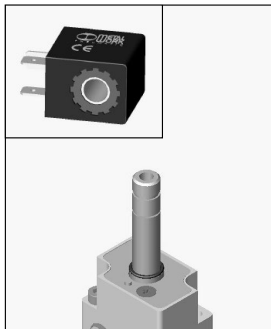

- Inserire l'O-Ring come a disegno
- Insert the O-Ring like drawing

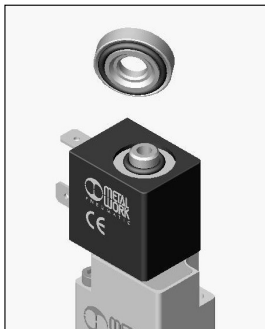

- Inserire la bobina e le O-Ring come a disegno
- Inserire l'O-Ring nella ghiera
- Insert the coil and O-Rings like drawing
- Insert the O-Ring in the ring nut

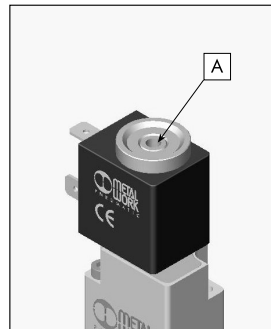

- Avvitare la ghiera, coppia max 1 Nm
- Screw the ring nut, max torque 1 Nm